

Telephone:
Fax:
Sales tax registration no.:

System operation

- Pressing remote transmitter LOCK button activates alarm and central locking.
- Pressing remote transmitter UNLOCK button deactivates alarm and unlocks the doors.
- If vehicle unlocked and doors or trunk/tailgate not opened within 30 seconds, locks/alarm are reactivated.

Programming

When

- Remote transmitter added or replaced.
- System malfunction.

How

- Ensure key removed from ignition switch.
- Locate central locking signal control module [Fig. 1](#) [1].
- With harness multi-plug still connected, jump harness multi-plug terminals 1 and 9:
 - System should now lock and unlock vehicle once.
- Press any remote transmitter button:
 - System should now lock and unlock vehicle once to confirm.
- Repeat button procedure to program second remote transmitter.
- To exit programming mode: Remove jump lead from central locking signal control module harness multi-plug.
- Refit all components in reverse order of removal.

NOTE: A maximum of 2 remote transmitters can be programmed.

NOTE: Programming remote transmitter erases all previous codes. Both remote transmitters must be programmed at the same time.


[Fig. 1](#) [Fig. 2](#)

Manufacturer: Toyota
Engine code: 1MZ-FE
Tuned for:


Model: Sienna 3.0
Output: 194/5200
Year: 1998-00

© Autodata Limited 2011
. 9/26/2011
V8.609M- ***/Autodata***

1

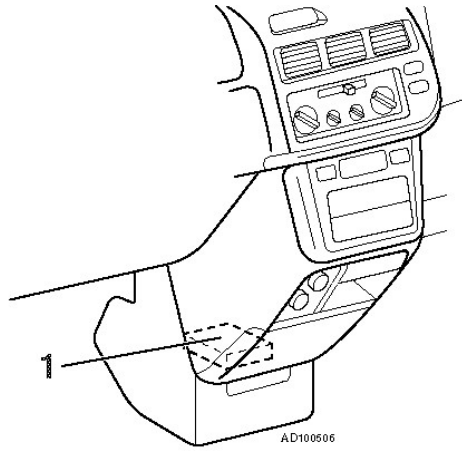

2

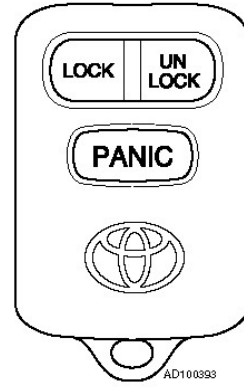

Manufacturer: Toyota
Engine code: 1MZ-FE
Tuned for:

Model: Sienna 3.0
Output: 194/5200
Year: 1998-00

© Autodata Limited 2011
 . 9/26/2011

V8.609M- ***/Autodata***